


Operation instructions

9.2 Wheel diameter: The location of speed display symbol **WD**, press **UP/DOWN** button rorate display the symbol **16/18/20/22/24/26/700C/28/29**.Value represents the diameter of the wheel(inch).Wrong wheel diameter setting will cause speed abnormal.

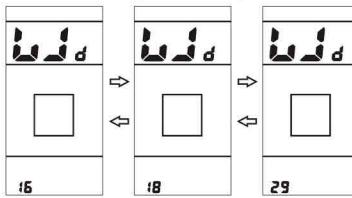

9.3 Speed limit set: The location of speed displays speed limit value, the default value is **27Km/h**.Press **UP/DOWN** buttons to modify the value;the value can be set from 12 to 60Km/h.Press **POWER** button to confirm when you finish the adjustment.


The maximum speed is restrict by the motor and controller, probably couldn't reach the setting value.



10 Error Code define

C965A display can give warning message when E-bike exist error, LCD display **ERROR** icon and the error code in speed position ,error code is from 01H~FFH, the definition see the table below.



| Error code | Error description | Error display |
|------------|---------------------------------------|------------------------------|
| 0X01 | Normal | No error |
| 0X03 | Brake signal | Display 03 on speed position |
| 0X06 | Low voltage protection | Display 06 on speed position |
| 0X07 | High voltage protection | Display 07 on speed position |
| 0X08 | Hall line of motor error | Display 08 on speed position |
| 0X09 | Phase line of the motor error | Display 09 on speed position |
| 0X10 | High temperature of controller | Display 10 on speed position |
| 0X11 | Controller's temperature sensor error | Display 11 on speed position |
| 0X12 | Current sensor error | Display 12 on speed position |
| 0X13 | Battery's temperature sensor error | Display 13 on speed position |
| 0X14 | Motor's temperature sensor error | Display 14 on speed position |
| 0X21 | Motor's speed sensor error | Display 21 on speed position |
| 0X22 | BMS communication error | Display 22 on speed position |
| 0X23 | Head light error | Display 23 on speed position |
| 0X30 | Communication error | Display 30 on speed position |

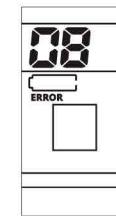

11 Assembly instruction

Please pay attention to the screw's torque value, damaged caused by excessive torque is not within the scope of the warranty.

There are 2 directions for the clamp installation, forward or backward. Different assembly methods will need different cable length.

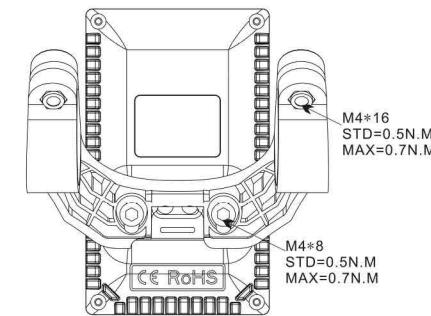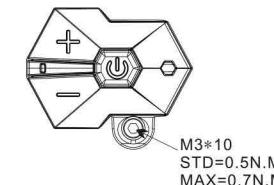

Clamps suit for 3 size of handlebar,31.8mm,25.4mm 22.2mm,there are transfer rings for 25.4mm and 22.2mm,transfer ring must be assembled with the special directions,pay attention to the green arrow below.



Operation instructions